


FLEXJOINT® POURING GRADE

CLOSED CELL  
POLYETHYLENE FOAM

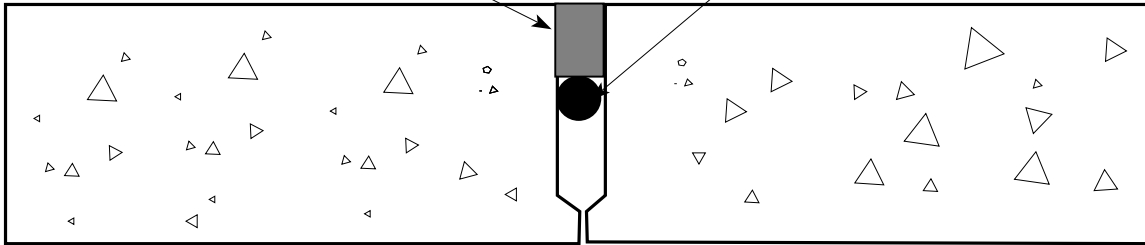


**SAWCUT  
JOINT**

FLEXJOINT®  
POLYSULFIDE  
PRIMER ON JOINT  
SIDEWALL

FLEXJOINT®  
POLYSULFIDE

PLASTIC TAPE OVER EXPANSION BOARD

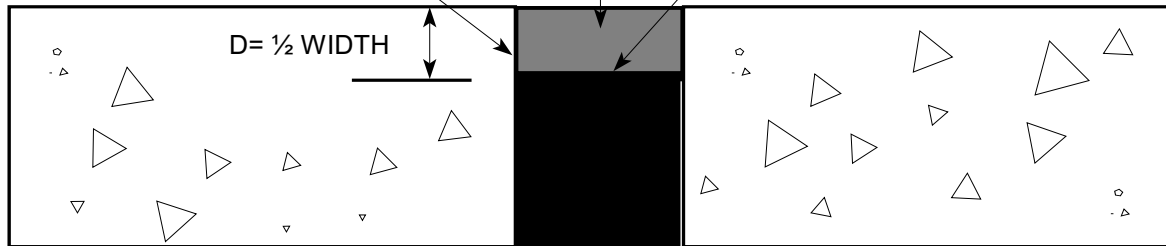

**EXPANSION  
JOINT**

SAWCUTS MUST BE MADE  
DURING INITIAL CURE  
(USUALLY WITHIN 24  
HOURS OF FINISHING.)

**NOTE:** DO NOT INSTALL  
FLEXJOINT® UNTIL  
CONCRETE IS COMPLETELY  
CURED AND AFTER THE  
ENCLOSED ROOM HAS  
REACHED NORMAL  
TEMPERATURE.

*This drawing, including the principle of design, is the property of ErgonArmor and is submitted with the understanding that it will not be used for any purpose except that specified in writing by ErgonArmor. While all statements, technical information, and recommendations contained herein are based on information our company believes to be reliable, nothing contained herein shall constitute any warranty, express or implied, with respect to the products and/or services described herein and any such warranties are expressly disclaimed. We recommend that the prospective purchaser or user independently determine the suitability of our product(s) for their intended use. No statement, information or recommendation with respect to our products, whether contained herein or otherwise communicated, shall be legally binding upon us unless expressly set forth in a written agreement between us and the purchaser/user.*

**CED 1021** 10/12 SUPERSEDES 04/01  
**JOINT FILLING IN CONCRETE FLOORS**

NO SCALE  
DRAWN BY: BEF  
COPYRIGHT: ERGONARMOR  
CORROSION ENGINEERING

